

## Engine Oil Inspection and Replacement Guide


1. Use an Allen key to loosen the 8 x M5 bolts to take off the deck. If there is dirt in the screw head, use pressurized air to blow out the dirt before attempting to unbolt the screws. This will avoid stripping of the screw head.



2. Take off the oil dipstick and wipe it with a clean cloth. Re-insert the dipstick and check the oil level. The level should be just below the "H" mark. If the oil level is too low, add small amounts at a time so as to not overfill the engine. Use only full-synthetic 5W-40 oil.



4. Use an 8mm socket to loosen 4 screws to take off the front intake plate. Next, use 10mm and 14mm wrenches to remove drain plug and then drain the engine oil. Re-tighten the drain plug and then bolt the front intake plate back on.

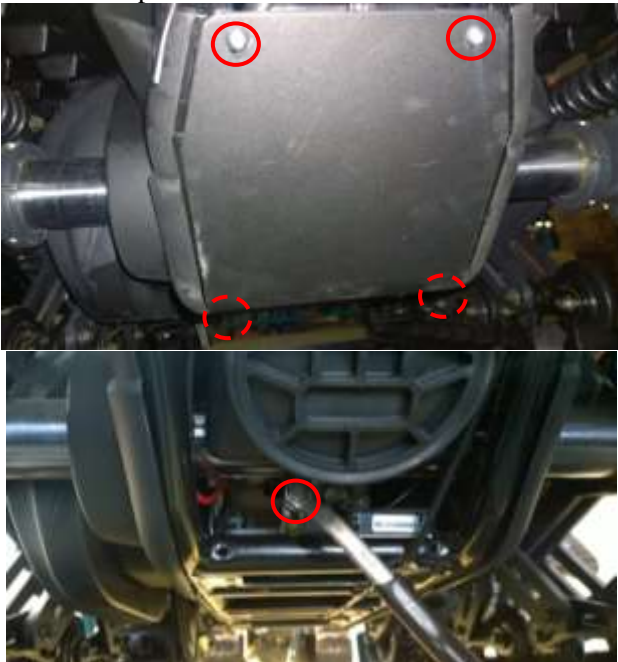

5. Fill 700ml of full-synthetic engine oil, make sure the engine oil dipstick is close to the H position. Use 5W-40 premium motor oil.

