

Chain and sprocket wheel installation instructions (Left)


1. Use a flathead screwdriver to take off the large bogey wheel covers, and use a 13mm wrench to loosen the two bolts.



2. Take the track off and loosen 4 bolts which fasten the right suspension with 4mm hexagonal key.



3. Loosen the chain adjuster nuts (12mm wrench), and the drive spokes bolt with 14mm & 17mm wrenches.

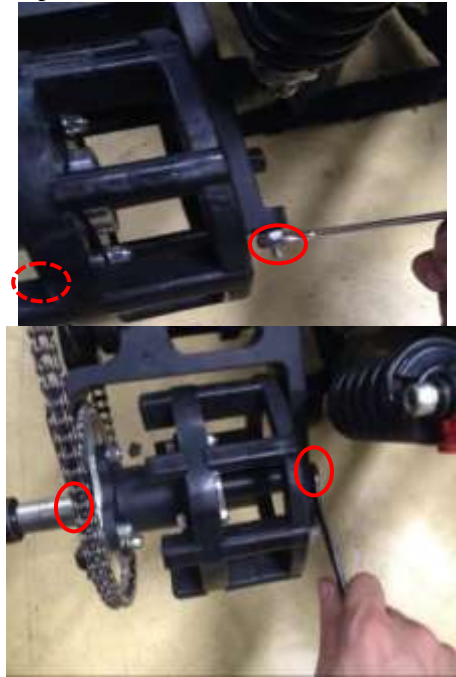

4. Unscrew chain guide bolt (15mm wrench), and take the small sprocket circlip out (circlip pliers). Then take the chain, chain guide and small chain sprocket off.



5. Install the new small sprocket with the circlip pliers.



6. Install the new chain and chain guide components, and tighten the bolt.



7. After assembly of both suspensions components, put tracks back on and make sure they are aligned as seen below.



8. Rotate the track to help slide it onto the inside big bogey wheel, and then mount the outside big bogey wheels. Insert and tighten the bolts back on with their respective washers and plates and put the bogey wheel covers back on. Follow the chain and tracks adjustment guides to make sure your DTV is at optimal setup.

